

BUILD A SHORTWAVE ANTENNA

"The Search For The Perfect Shortwave Antenna"

by N4UJW Webmaster Hamuniverse.com

**Follow these simple plans to build a multiband shortwave antenna
and be on your way to world band radio excitement!
Hear shortwave signals live as they happen directly from around the
world!**

Many years ago, my dad sparked my interest in shortwave radio, which led to me becoming a licensed Amateur Radio Operator in 1989. Lots of us "Hams", listen to the shortwave bands when we are not in the "talk" mode ON THE AIR. I have enjoyed shortwave radio since a small child!

The excitement of listening to voices, music, news and other fascinating information and radio signals of all types from around the world can be yours too. You, my friend are probably just getting started in this fascinating hobby or you just want to improve your reception.....

WELCOME!

Just follow these simple instructions below to build either an outdoor or indoor multiband shortwave antenna. These antenna types described below can generally be used either outdoors or indoors, but lots depends on the room you have for the wire. They have been broken down into their most common use and simple antennas. For the most part, they will outperform or at least equal commercial made shortwave antennas for a lot less money and you will have the satisfaction of saying, "I built it myself"! You don't have to know antenna theory to build these antennas, but included is one very simple formula that all Hams use in designing these types of antennas.

Let's get started.

A NOTE ABOUT WIRE FOR SHORTWAVE ANTENNAS:

An antenna is composed of a conductor that carries the electrical signals to your receiver.

There are many kinds and types of wire starting with single wires made of copper and stranded wire made from steel with a copper coating on the outside. Many "wires" have multiple conductors like telephone wire used for adding extra telephones or regular speaker wire with only 2 conductors side by side.

Most shortwave antennas require only one conductor or wire in the "elements" of the antenna so when using "wire" for antennas, you can use the least expensive types.

The size of the wire can be an important thing if the antenna is designed to be used outdoors in the weather. Use a minimum wire size of about #20 to #18 outside. When you use sizes much smaller than these, you get into problems with breakage from ice, wind, birds, etc.

Wire sizes are numbered by their gauge, larger sizes are the smaller gauges. A #14 wire is larger in diameter than a #20 wire gauge. Most ham radio operators use # 12 to #14 wire sizes outdoors!

So when we refer to "wire" in the article and projects below, use the appropriate wire size.

OUTDOOR GENERAL PURPOSE MULTIBAND SHORTWAVE (WORLD BAND) ANTENNAS

THE LONG WIRE SHORTWAVE ANTENNA

The simplest multiband shortwave antenna for shortwave listening is probably the longwire for most newcomers to building antennas. It is literally, a random long length of wire stretched out from the shortwave receiver antenna connection and attached with some form of an insulator on the opposite end. No bells or whistles and usually very easy to do.

Your shortwave radio probably has either a short telescoping (pull-up) antenna and or a connection point for an external antenna usually on the rear. [A very simple method of drastically increasing the signal strength to your shortwave radio](#) is to simply add about 50 to 70 feet or more of insulated wire of small diameter, (size not critical, it must support it's own weight), attached to either the telescoping antenna with an alligator clip or a suitable connector to the rear external antenna connection and stringing it out across or from the house to the appropriate support as high as possible on each end with some form of insulator along the entire length, (a non-metal device that will not pass electricity). In other words, don't run it along a water pipe, conduit, metal house siding, rain gutters, etc. It can be tacked along the ceiling or snaked up into the attic or around the roof. Just don't run it close to metal. Use your imagination. Make sure that you have removed the insulation when adding the connector or alligator clip.

DANGER! DO NOT STRING THIS ANTENNA OR ANY ANTENNA OVER,

UNDER or NEAR ANY ELECTRIC POWER LINES OF ANY TYPE! YOUR LIFE WILL BE IN YOUR HANDS, NOT MINE and I assume no liability. Repeat....never **OVER, UNDER or NEAR POWER LINES!** This includes the service drop wire from the utility power pole to your electric meter! Have adequate space allowed to insure that if a power line falls, it will not fall on your shortwave antenna! Use this rule of thumb.... If it is under the power line.....the power line WILL FALL! If it is over it, the antenna WILL FALL! You don't want either happen!

Now back to shortwave antennas.

The longwire type of antenna is a compromise as ALL antennas are. Don't expect the same reception 100% of the time from the same station. Mother nature and man-made variables will surely destroy your expectations. This type of antenna generally "picks up" stations better in the direction of the wire, so if you live in the U.S.A., you can string it in a Northeast Southwest direction and get the European stations somewhat better. Don't worry if your layout is not perfect....just put it up and have fun listening.

THE MULTIBAND LONG WIRE SHORTWAVE ANTENNA A Much Better But More Complicated Antenna

This antenna is end supported and designed to receive the major shortwave bands between 90 meters and 16 meters. It uses only 4 wires and a unique antenna property called harmonics to get 8 bands using only 4 wires! Again, it is a compromise but an excellent performer....the perfect antenna does not exist. We "Hams" are working on it constantly!

After construction, this shortwave antenna should be stretched out in a straight line as high as possible as in the long wire antenna above, and about 140 feet straight out from the house! Don't fret! If you can't, you can't. Utilize your existing space. More supports may be required for a zig zag layout but performance may suffer a bit. Don't worry, it will certainly outperform that built in poor excuse for an antenna!

It consists of 4 separated insulated wires, (measurements below), all connected (soldered) on one end, leaving the opposite end unconnected and insulated at the support. If you do not know how to solder, then scrap all the coating from the wire down to bare copper and tie the ends together using several knots. You really should learn to solder though!. This will make for a more permanent and much better electrical connection.


The soldered end must be between an insulator and the radio for mechanical

strength.

You don't want much stress on the soldered connection other than the coax leading to the radio. The end that has all wires connected should be soldered to the center wire of a suitable length of 50 - 75 ohm coaxial cable leading to the short wave radio with a suitable connection. A ground wire is soldered to the shield only of the coax at the same end that you soldered all the wires together and attached to a ground rod driven into the ground near the house. Seal and tape all outdoor connections from the weather. This antenna is called an end fed half wave antenna.

See picture, formula and wire measurements for bands below:

(The lengths are not extremely critical, but try to get them as close as possible.)

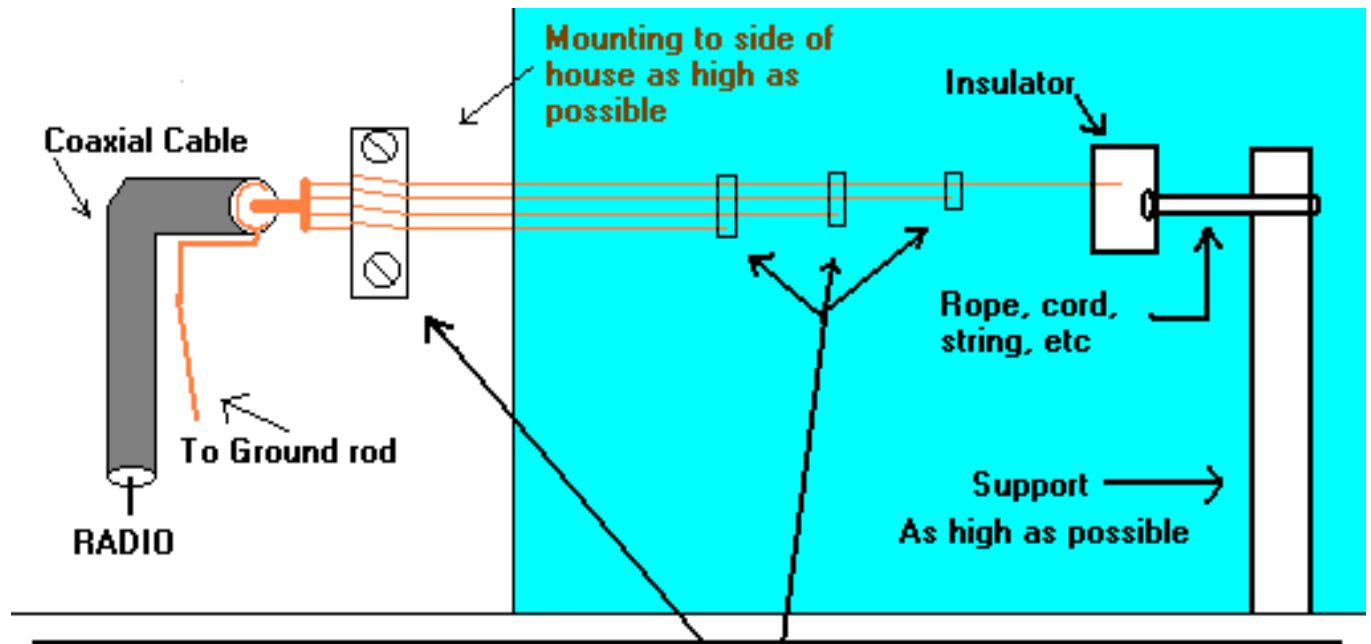

This insulator/strain relief is used to keep strain off the connection. It can be made from a simple strip of wood pressed over the 4 wires using one twist around it and then screwed to the house. You can experiment with your particular mounting. Since the longest wire will be the main support for the other 3 shorter wires, you will have to secure each shorter wire to the longer wire to support them. Use electrical tape or your own method making sure none of the wires short to any other wire.

n4ujw

Note: In the instruction box above, the last sentence refers to the long portion of the wires, not at the connection point to the coax feed line to the receiver. All wires are connected together at the connector center conductor wire!

(frequencies shown below are approximate shortwave band centers):

Wire 1 (LONGEST WIRE) 3.25 MHz (90 meter band) 09.75 MHz (31 meter band 3rd harmonic)

468 divided by 3.25 = 144' 0"

Wire 2 3.95 MHz (75 meter band) 11.85 MHz (25 meter band 3rd harmonic)

468 divided by 3.95 = 118' 6"

Wire 3 5.10 MHz (60 meter band) 15.30 MHz (19 meter band 3rd harmonic)

468 divided by 5.10 = 91' 9"

Wire 4 (SHORTEST WIRE) 5.90 MHz (49 meter band) 17.70 MHz (16 meter band 3rd harmonic)

468 divided by 5.90 = 79' 3"

The number 468 divided by the frequency above is the formula for calculating a half wave antenna length used all the time by Amateur radio operators in building many different kinds of antennas.

You'll need about 435 feet of wire for this antenna plus appropriate length of coaxial cable.

Check with Lowe's, Home Depot, Radio shack, Wal Mart, farm supply stores and other stores that might have wire bargains. Dual conductor speaker hookup wire can be purchased in rolls and split in half to double the length. Multiconductor tv antenna rotor wire can be used the same way. Electric fence wire is also a good alternative.

The wires are spread 3-4 inches apart, held in place with simple non-conductive spacers.

Just cut a few pairs of the acrylic, Plexiglas, plastic strips or other non-conductive material that will not be damaged by moisture long enough to attach the wires keeping the spacing about 3 to 4 inches or further if you want.

Use your own ingenuity with the attachment method while keeping them separated.

To accomplish all of this, you stretch the antenna on the ground, assemble it, then get it up to the support with your own best way.

OUTDOOR CENTER FED MULTIBAND (FAN) DIPOLE SHORT WAVE ANTENNA

NOTE: For use with the higher quality table model communications receivers that have standard antenna connectors capable of using direct coaxial cable connectors.

This antenna type is used by many Ham Radio Operators worldwide and is very popular but the lengths for the Ham bands are entirely different.

The entire length of the antenna is about the same as the one above and the coaxial cable is connected in the center of the span with the center conductor connected to one side of the antenna and the shield connected to the other side then at the other end, to the receiver.

The formula used for this antenna is the same as the Multiband Long Wire above:

468 / by frequency in mhz = total length in feet. **This resulting length is cut in half!**

One antenna per band stacked.

It is somewhat more complicated in construction due to the center connection and requires support in three places....each end plus the center. The preferred method for using this antenna is drawn in the picture below with the wires "fanned" apart with at least a foot of separation between the ends.

All of the wire elements can be close spaced but some interaction will occur. Insulated wire is best so the individual wires do not connect on the longer lengths of the antenna.

Choose the antenna of your choice depending on your constructions skill and needs.


Either way, they both will be much better than the little telescoping antenna that comes with most portable receivers.

The center fed multiband dipole antenna (drawn below) consists of 2 separate sections of 4 wires on each side of the center connection at the support consisting of 4 wires connected to the center conductor of the coax and the other 4 connected to the shield.

In this arrangement, one half of the antenna is feeding the center conductor and the other half is feeding the shield. Each side must be insulated....not connected....to the other side. The other end of the coax is connected to the radio with the appropriate connector.

Use lengths in the above multiband antenna with total length split in half using the formula....half on one side and half on the other for each wire length per band. The coax can be anything from 50 ohm to 75 ohm.

Not critical on receive! You will have to use the proper connector on the end of the coax for your receiver antenna jack.

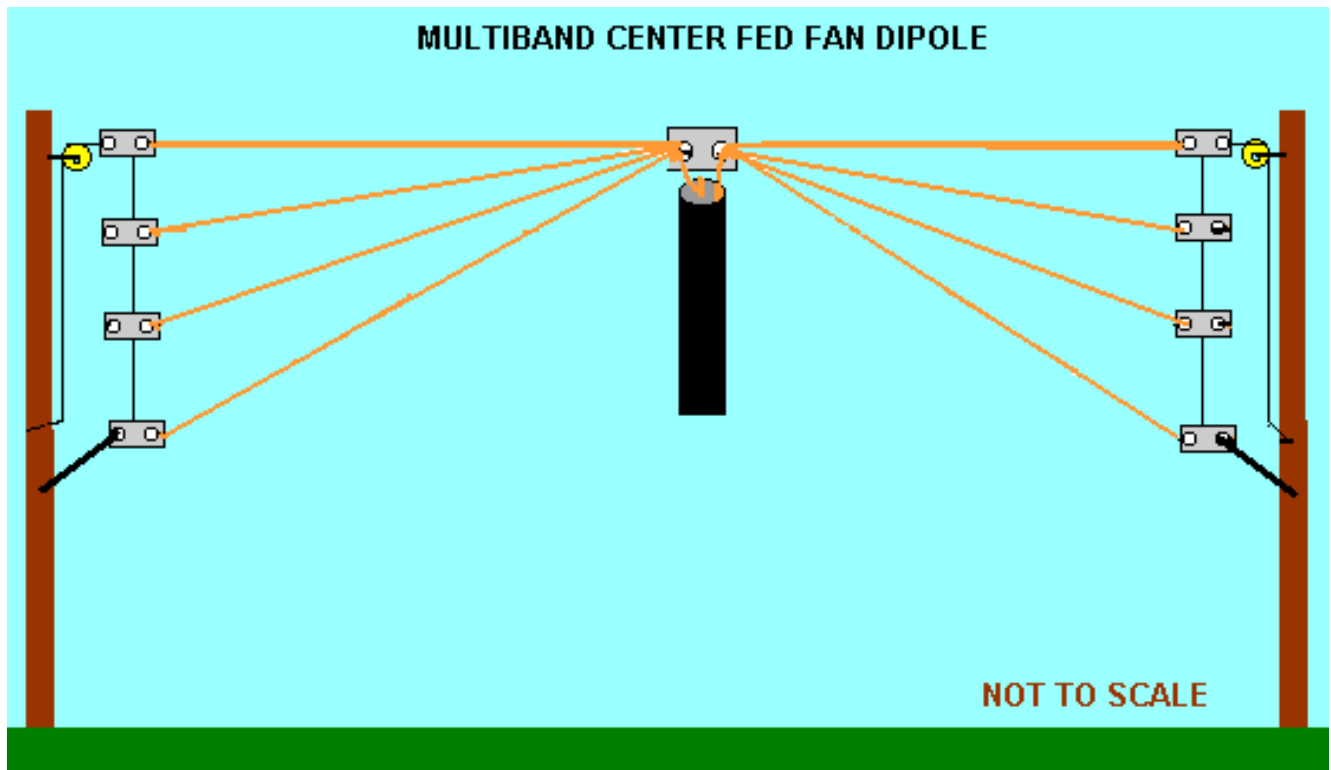

Shown supported between two wooden poles. Gray rectangles are insulators.
 Yellow circles are pulleys.
 Orange lines are dipole elements.
 Heavy black vertical line in center is coax leading to radio.
 Note that one side of antenna is connected to center of coax, shield to the other side.

Note in the drawing above that the small gray rectangles represent insulators!

The final assembled antenna can be installed with the center section higher than the ends, making it look like an inverted V, like this \wedge . Make the angle of the V about 90 degrees or more.

Or it can be horizontal to the earth or anywhere in between.

The inverted V configuration is more omni-directional, (all directions), than the horizontal method which tends to receive best, broadside to the wire. Less real estate is required for the inverted V method. Center supporting also has less tension on the antenna so smaller wire size may be used to save money.

Choose the antenna of your choice above depending on your constructions skill and needs. Either way, they both will be better than the little telescoping antenna that comes with most portable receivers.

Enjoy!

INDOOR MULTIBAND SHORTWAVE ANTENNAS

Attic Antennas

To begin with building and installing an attic antenna that helps your reception, you need to take stock of your attic's measurements, particularly the length of the attic at it's longest distance that you have easy access and your radio's location.

One of the more common house sizes is about 50 to 60 feet long and about 25 to 30 feet wide at the ground level. Your house or home may be entirely different. The accessible attic space usually is much less than this. You will have to really compromise with an attic antenna as far as the band coverage is concerned for a short wave antenna to perform adequately. Use the dimensions of your attic and compare them with the lengths of the long wire and dipole type antennas in this article above and choose the one that you can "fit" into the attic. You may not be able to use lengths for all the bands, but again, no matter what length your end result is, it will certainly outperform that little pip squeak of a poor excuse for an antenna that came with the radio! Just utilize the space that you have and don't worry about the length. Just use as much wire as you can and forget about that "perfect antenna". It still does not exist up to this point in this article! Hams are still working worldwide on it!

The best place to mount or attach the antenna is against the peak or highest part of the roof thereby keeping it away from ductwork, AC and heater systems, telephone and all the other metallic environment that exists in most attics. Once you have the location selected, then build the antenna while keeping in mind that the coax or wire will have to get to the radio. If you're working up on the roof, get a helper to assist, an adult, not children! Be careful on those ladders!

You can push most small coaxial cable under the space where the carpet and wall come together and wire should be no problem, then to the nearest closet, up the wall and into the attic. You can work from the attic down or radio up....your choice. Lots of variables here too so you will have to choose your own route and method of installation. If you have to drill into a wall to feed the wire, use caution and don't drill into electrical wires! It may be the last time you do!

IN ROOM ANTENNAS!

In those cases where you can't put an antenna outside or up in the attic, then you can install it in the same room with the radio! They won't be as effective as those up in the attic or outside but will still get more signal to your radio which is what you want. Simply use your own method to attach a random length wire, up next to the ceiling against the walls...around all sides of the room if possible. One other choice is to push a

random wire between the carpet and the baseboard around the walls of the room. You will be surprised at the difference compared to that telescoping antenna that came with your radio. Just attach the antenna to the telescoping rod...don't forget to remove the insulation on the wire at the attachment point!

RANDOM WIRE SHORTWAVE ANTENNAS.

The name says it all.....

just use any length of wire and as long as possible.

Now wasn't that one simple. Use same construction techniques as in above for supports and connections.

Adding optional wind up reel antennas to your shortwave radio.

Many companies offer optional wind up "reel" type antennas that attach to the telescoping antenna that comes with most receivers and they may help to improve reception to portable shortwave radio receivers, but, many leave lots to be desired, [so here is some simple information on how to modify most of them](#) to increase the length of the antenna wire that comes with them. Easy to do.

**Editors note: NONE OF THE ABOVE ANTENNAS ARE DESIGNED FOR TRANSMITTING....USE FOR RECEIVE ONLY!
DAMAGE TO TRANSMITTER MAY RESULT.**

"As I have stated above a couple of times, don't worry too much if you can't get the lengths exact at the beginning of this article or you don't have the ideal amount of real estate required for the longer antennas.

Just have fun and try to learn by doing. EXPERIMENT!

These longer length shortwave antennas may actually overload your receiver with too much signal on the less expensive short wave radios with telescoping antennas only. Just disconnect the alligator clip from the antenna and just wrap the wire several turns around it without the actual wire inside the insulation touching the antenna.

This will probably improve the overload."

"This author has helped the wire industry stay in business over the years as have other Amateur Radio Operators have done and I have enjoyed every minute of it. I have used just about every kind of material for an antenna for shortwave listening that would conduct a radio frequency including window frames, bed springs, rain gutters, conduit, aluminum tubing, coffee cans soldered together, old CB antennas, TV antennas, curtain rods, copper tubing,

aluminum trim from kitchen counter tops and on and on..... and the old standby.....wire!

I hope this article and projects were of some small use to you in your quest for the perfect short wave antenna!" Experiment, experiment, experiment! Have fun!

Webmaster Hamuniverse.com....N4UJW

Entire page and contents:

Copyright Material - All Rights Reserved. N4UJW Hamuniverse.com

[Shortwave Radios....An Introduction](#)

[Best Selling and Most Popular Shortwave Radios!](#)

You may also like to see how ham radio operators use and build antennas. You can see many different designs for various ham radio bands. Most are really overkill for shortwave listening and some require special test equipment but many can be used for some great shortwave listening!

[Check out the Ham Radio Antenna Projects here!](#)